


330ARP

◆ COLD Lamination (see Fig-3)

After the laminator has been turned on using the temperature transfer switch located on "0" position, the cold mode is automatically set. If the machine has just recently been used for hot lamination, then the machine must reach a temperature of no more than 25°C before starting cold lamination.

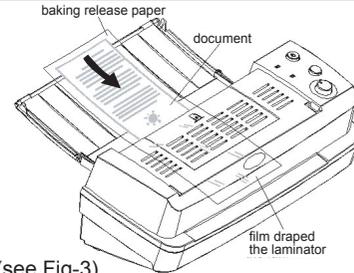

(see Fig-3)

1. Select a no-heat laminate that is slightly large than the document to be laminated.
2. Run the film, film-side faced up, for about 3~6mm into the laminator, and then press POWER BUTTON to stop the rollers.
3. Carefully separate the baking release paper from the film, and drape the clear film over the top of the laminator.
4. Place the document between the separated film and backing.
5. Then press the power switch to finish laminating.

◆ Cautions item:

To ensure safety and prevent serious accidents, such as crispate of pouch or fire, please obey the following steps completely.

1. To avoid the danger of electrical shock, keep the machine away from water sources or any wet conditions.
2. Do not laminating items such as Drawings on the heat-sensitive paper or matter whose color or quality is prone to change when heating.
3. Interlayer which is thicker than 1.0 mm is not suitable for lamination.
4. The pouches shouldn't be large than A3 paper.
5. Do not laminate easy melting, sticky objects and object too soft as well as thinner paper.
6. For prolonging the roller's life, you should revolve the **Temperature transfer switch** to "0" position after finished hot laminating and turn off the **power switch** about ten minutes later.

◆ Cleaning

- ⚠ Warning : please make sure that the machine has been turned off and unplugged before cleaning.
As to the smutch on the covers of the machine, please wipe them off by cloth.

◆ Service:

Do not attempt to service or repair the pouch laminator yourself. Unplug the unit and contact an authorized service representative for any required repairs.


◆ Technology data

Heating system	Hot shoe + heating plate
Laminating type	Cold & hot laminating
Laminating speed	750~800mm/min
Laminating thickness	1mm
Warm up time	3~3.5min
Roller quantity	4
Max. entrance width	330mm
Available thickness	75~250mic

330ARP

A3 LAMINATOR

Instruction Manual

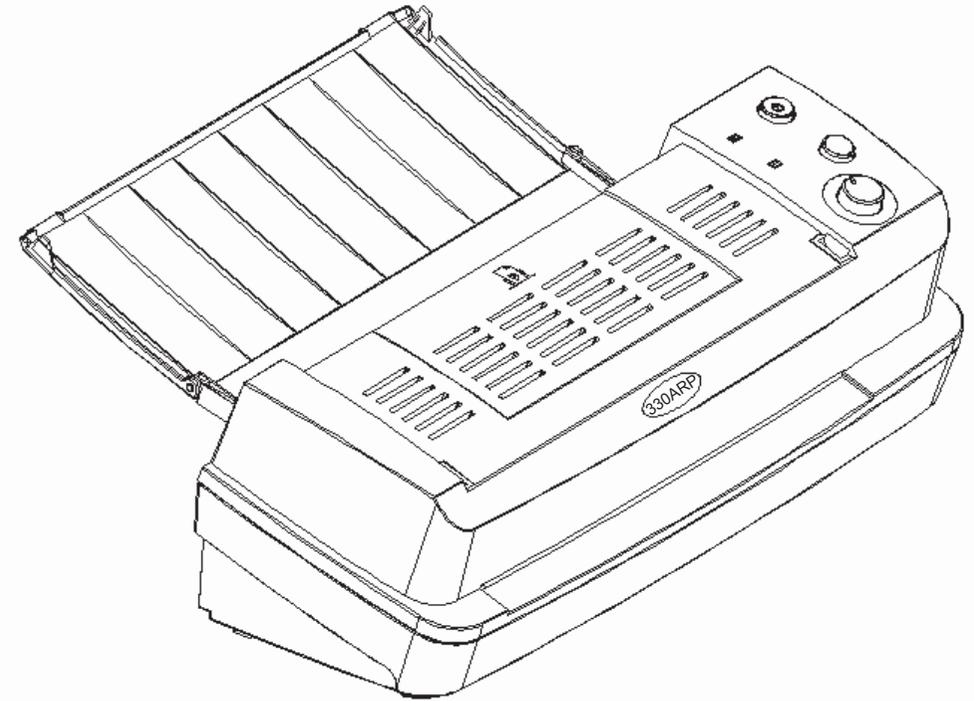

Model No : 330-ARP




WARNING:

For your protection, do not connect the pouch laminator to electrical power until you read this instruction completely. Keep this instruction in a convenient location for future reference.

330ARP

◆ COLD Lamination (see Fig-3)

After the laminator has been turned on using the temperature transfer switch located on "0" position, the cold mode is automatically set. If the machine has just recently been used for hot lamination, then the machine must reach a temperature of no more than 25°C before starting cold lamination.

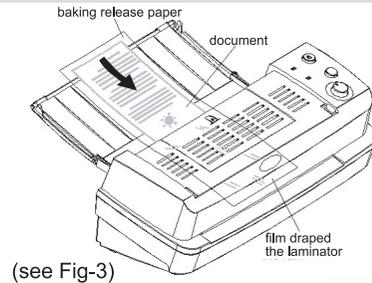

(see Fig-3)

1. Select a no-heat laminate that is slightly large than the document to be laminated.
2. Run the film, film-side faced up, for about 3~6mm into the laminator, and then press POWER BUTTON to stop the rollers.
3. Carefully separate the baking release paper from the film, and drape the clear film over the top of the laminator.
4. Place the document between the separated film and backing.
5. Then press the power switch to finish laminating.

◆ Cautions item:

To ensure safety and prevent serious accidents, such as crispate of pouch or fire, please obey the following steps completely.

1. To avoid the danger of electrical shock, keep the machine away from water sources or any wet conditions.
2. Do not laminating items such as Drawings on the heat-sensitive paper or matter whose color or quality is prone to change when heating.
3. Interlayer which is thicker than 1.0 mm is not suitable for lamination.
4. The pouches shouldn't be large than A3 paper.
5. Do not laminate easy melting, sticky objects and object too soft as well as thinner paper.
6. For prolonging the roller's life, you should revolve the **Temperature transfer switch** to "0" position after finished hot laminating and turn off the **power switch** about ten minutes later.

◆ Cleaning

- Warning : please make sure that the machine has been turned off and unplugged before cleaning.
- As to the smutch on the covers of the machine, please wipe them off by cloth.

◆ Service:

Do not attempt to service or repair the pouch laminator yourself. Unplug the unit and contact an authorized service representative for any required repairs.


◆ Technology data

Heating system	Hot shoe + heating plate
Laminating type	Cold & hot laminating
Laminating speed	750~800mm/min
Laminating thickness	1mm
Warm up time	3~3.5min
Roller quantity	4
Max. entrance width	330mm
Available thickness	75~250mic

330ARP

A3 LAMINATOR

Instruction Manual

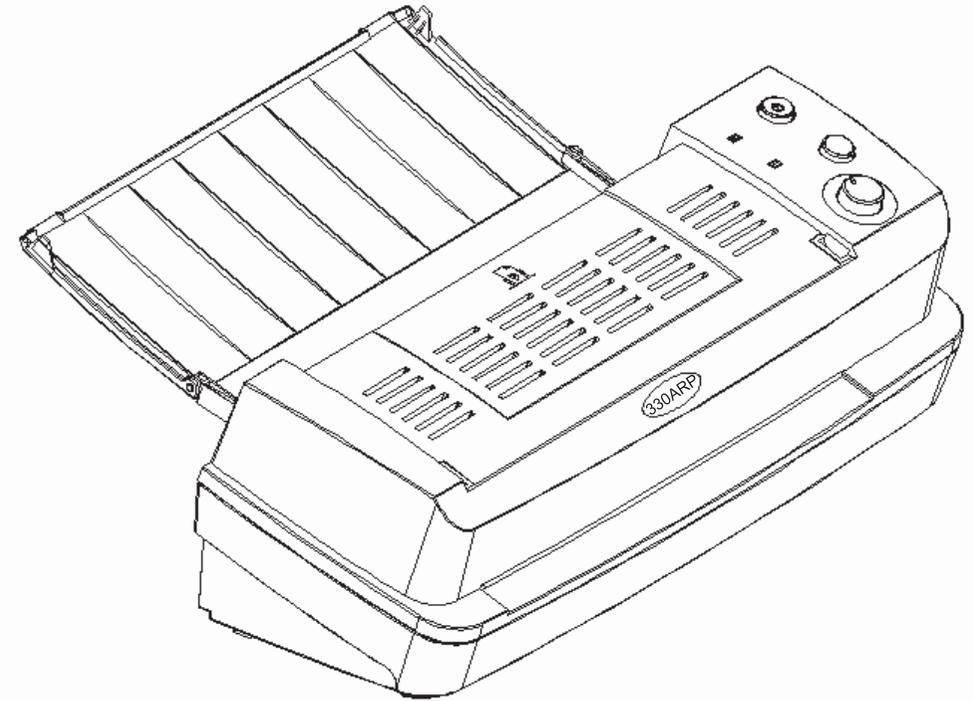

Mode I No : 330-ARP



WARNING:

For your protection, do not connect the pouch laminator to electrical power until you read this instruction completely. Keep this instruction in a convenient location for future reference.